

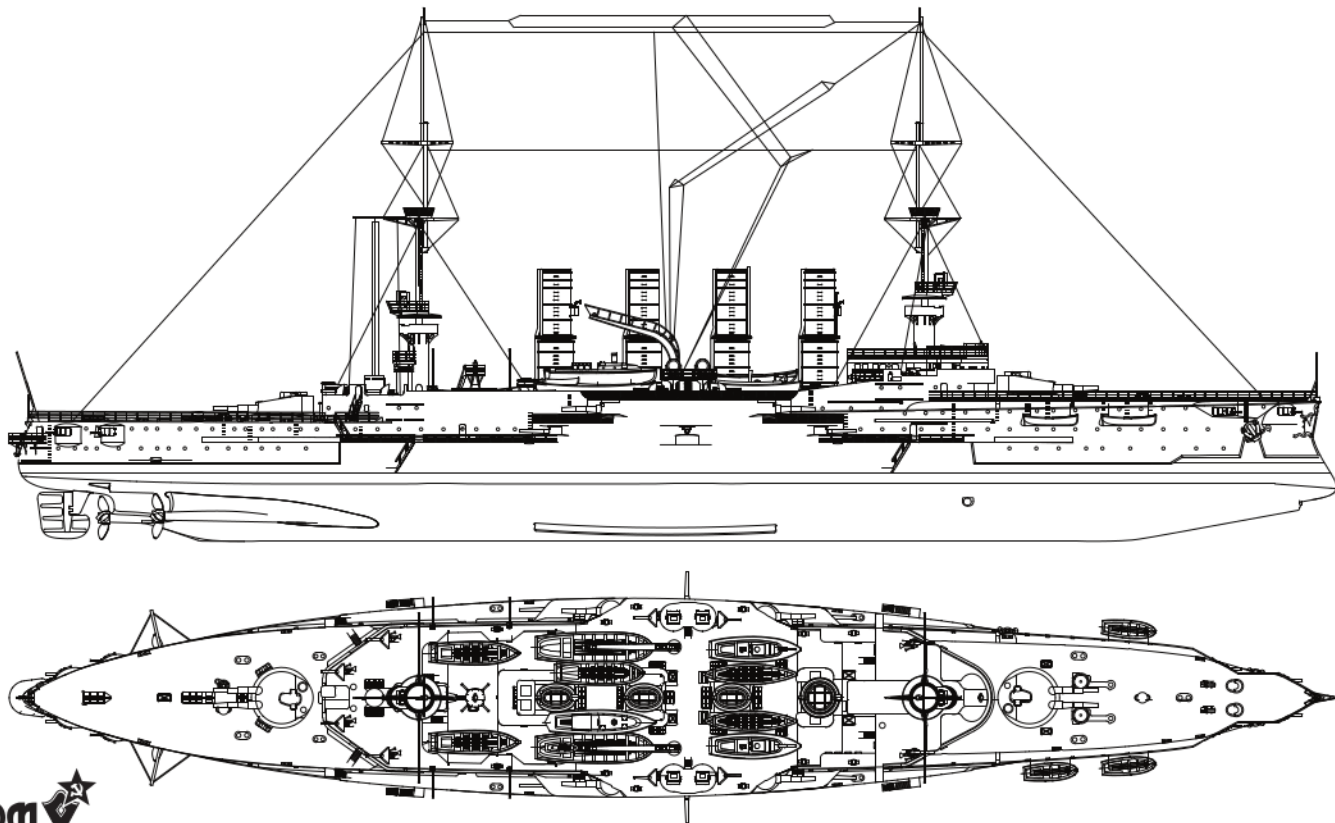



Armored Cruiser, 1908

SMS GNEISENAU

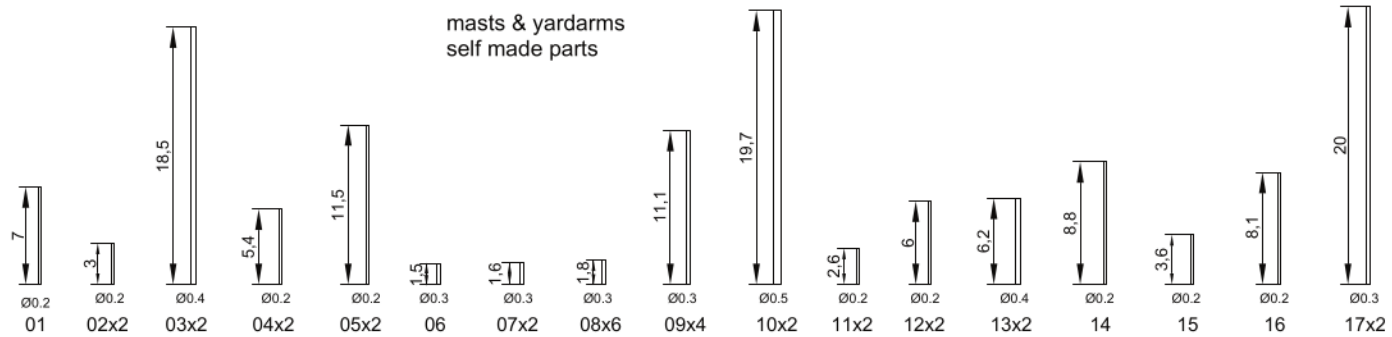


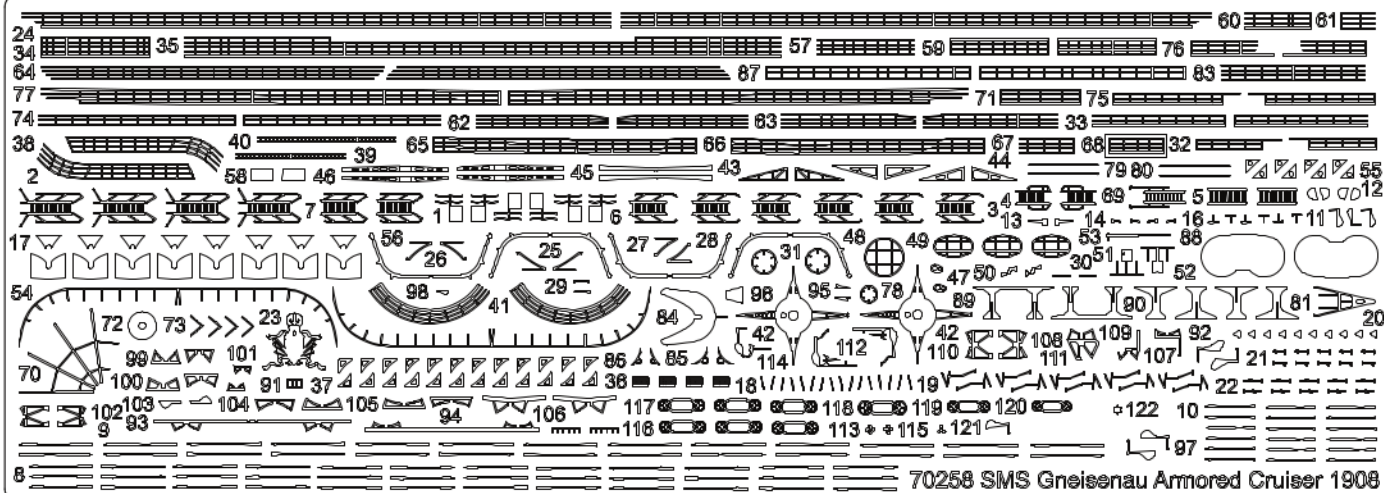


⚠ Please note that the assembly guide reflects the position of the parts when installed only, and not the exact order of the assembly.
 To download the assembly instructions in PDF (high resolution) please visit www.combrig-models.com

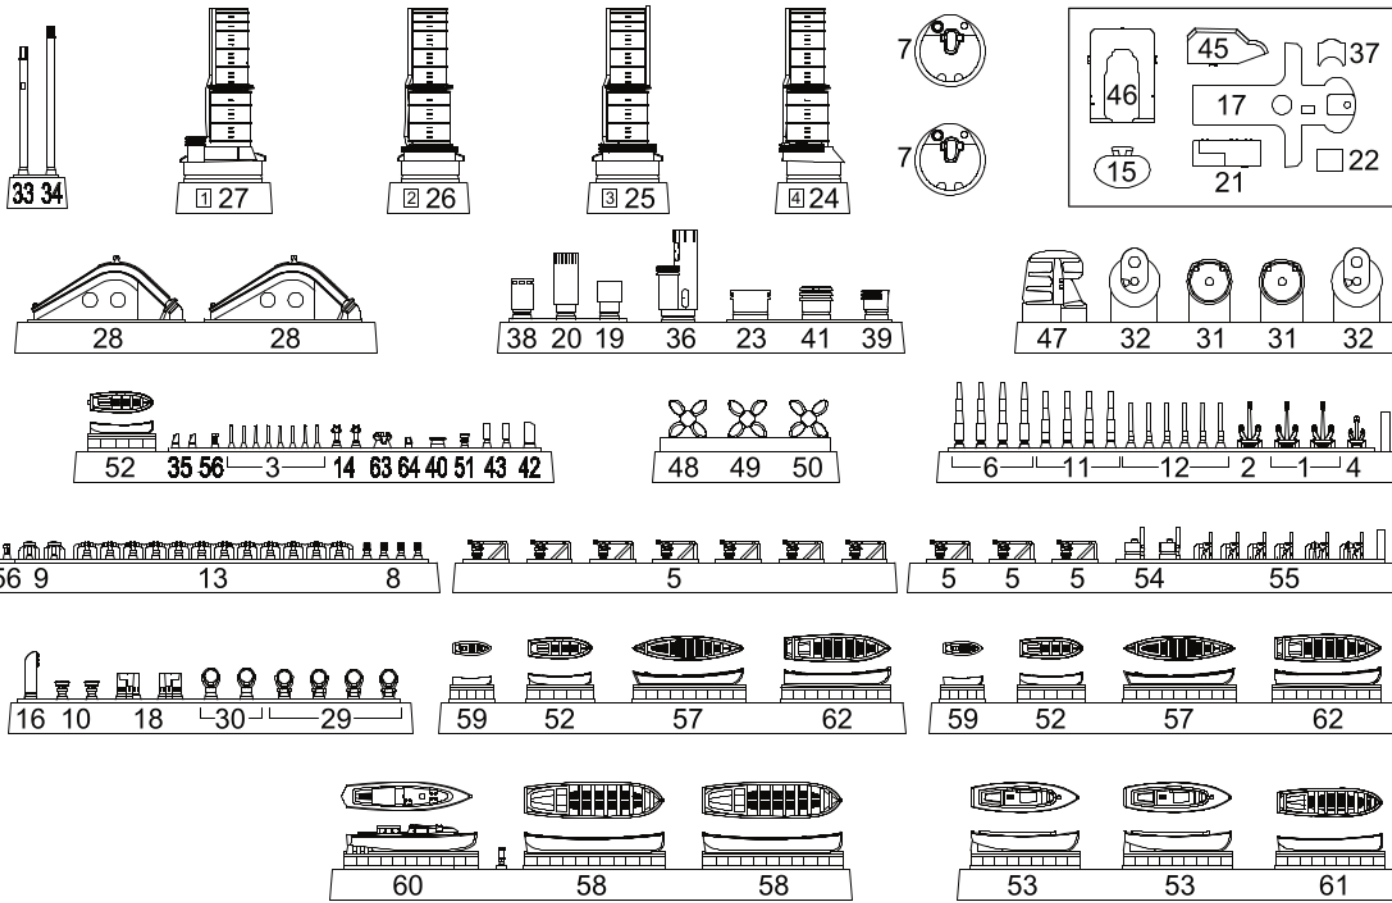

#G

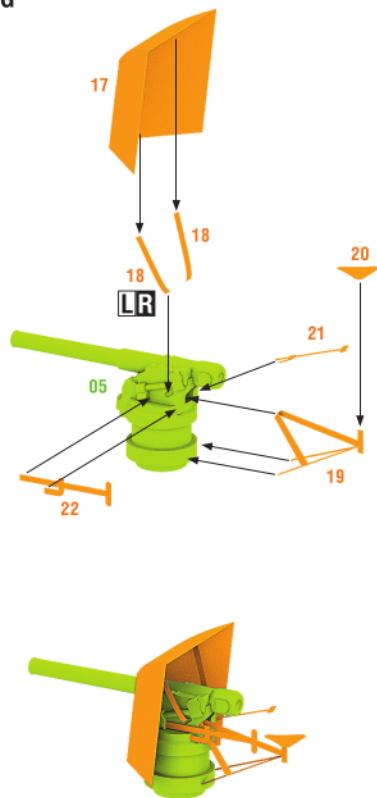


#H

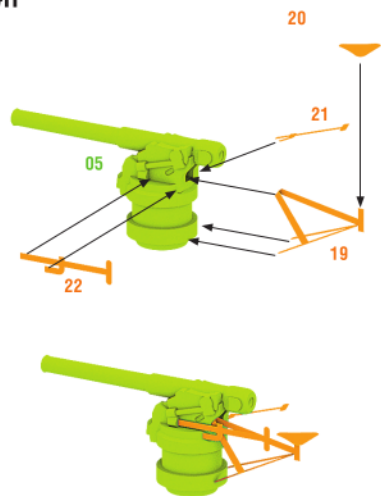


#O




#P

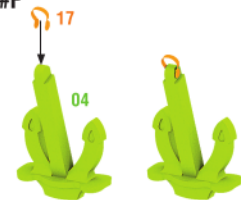


#K

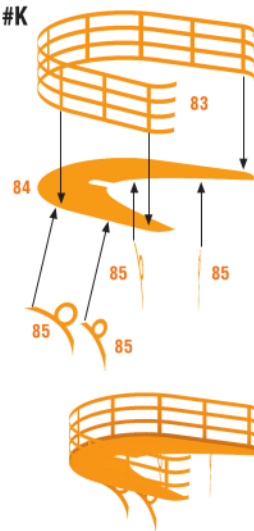

#I

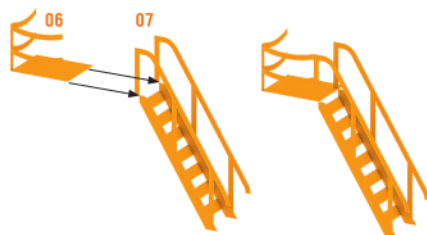

#J

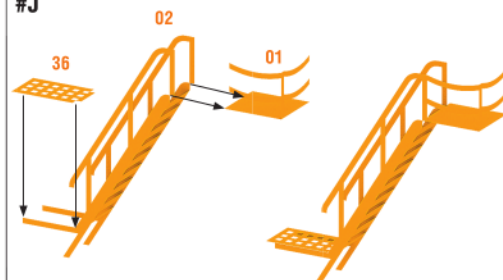

УСЛОВНЫЕ
ОБОЗНАЧЕНИЯ:

LR

Выполнить для левой и правой частей
Repeat for opposite side




Выбор варианта
Optional


x2

Повторить операцию
Repeat


#M

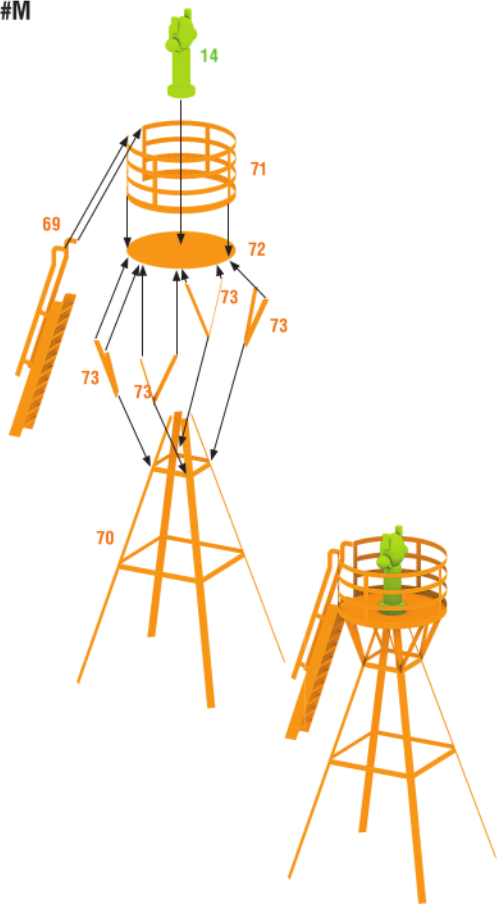


#L

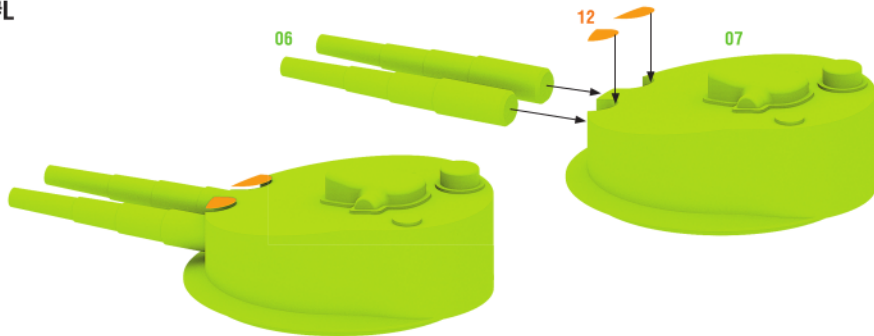


#N

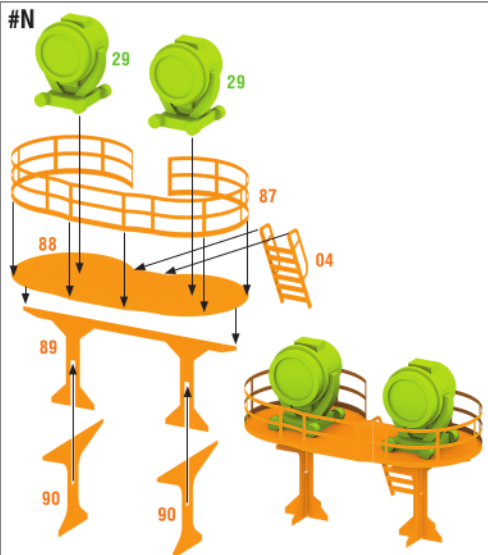

#Q

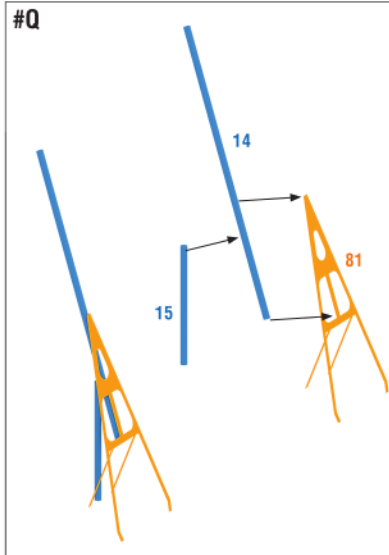

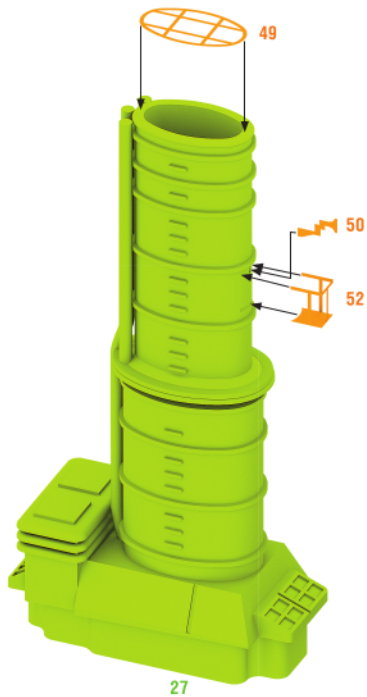


27




26




25

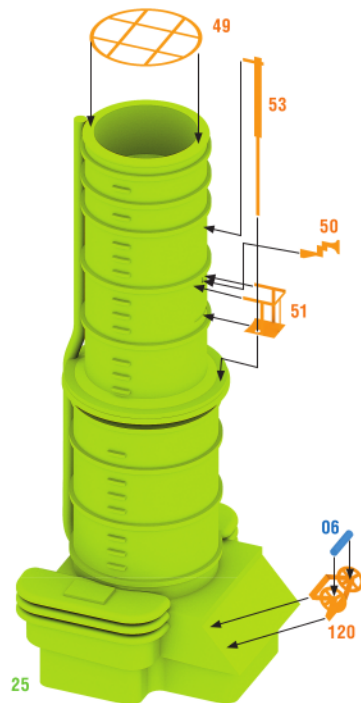


25

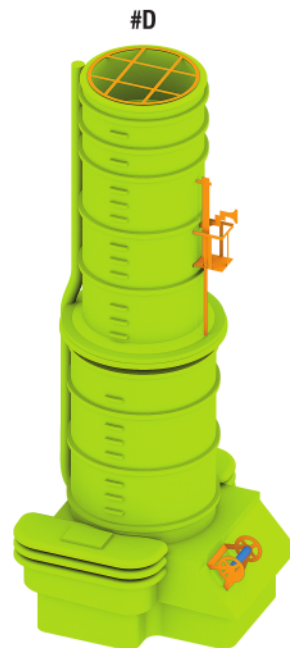


#R

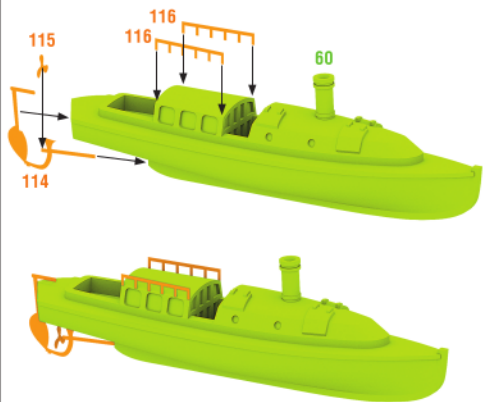


#S

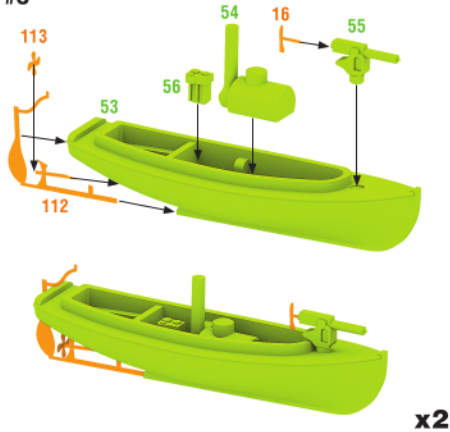


#Y

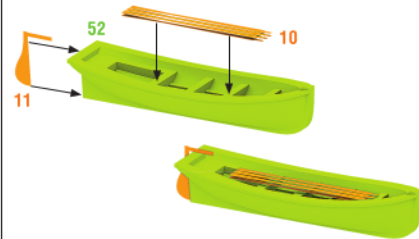


#W

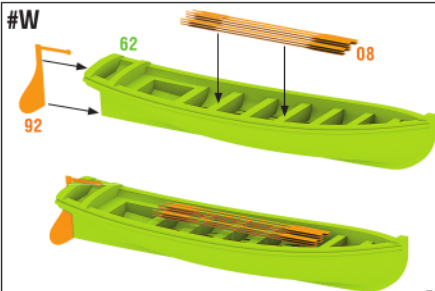


#T

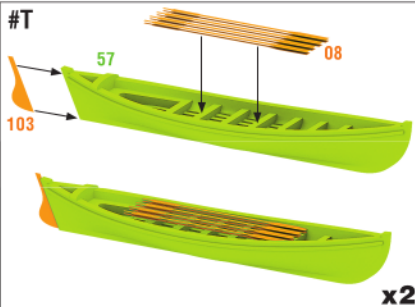

#V

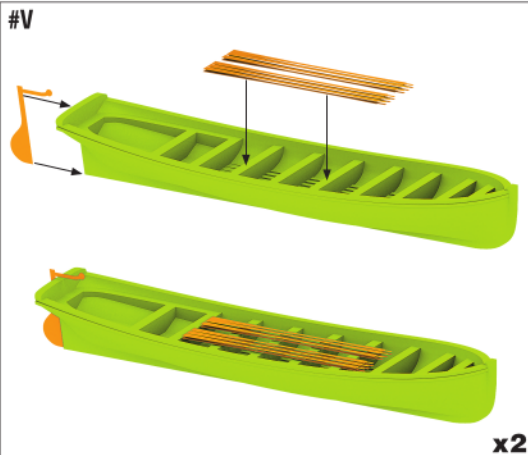


#X

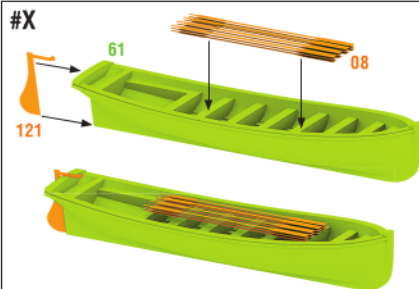

#U



#E

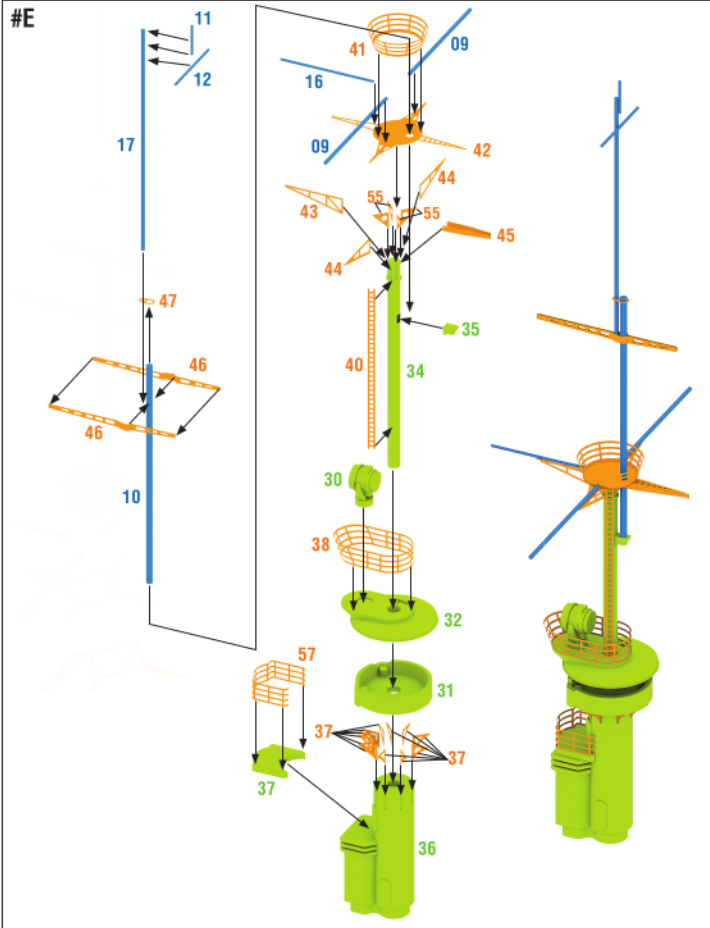

#F

